




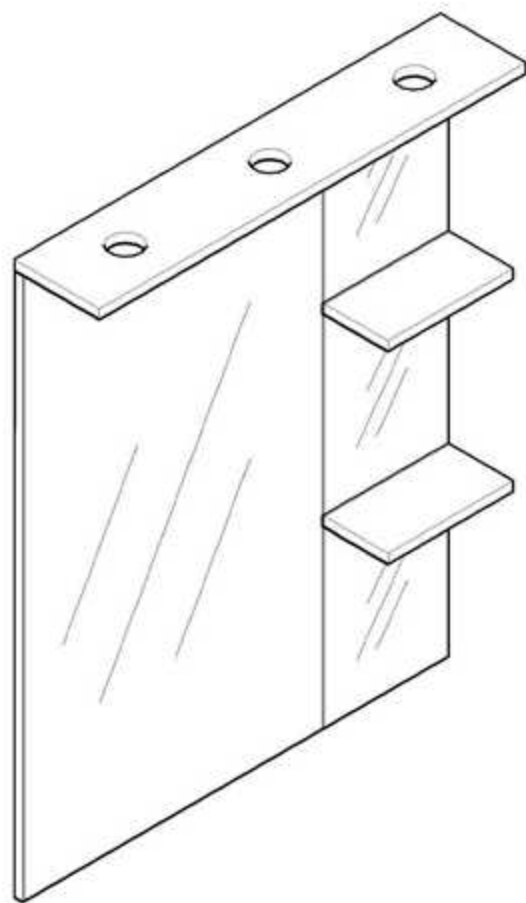


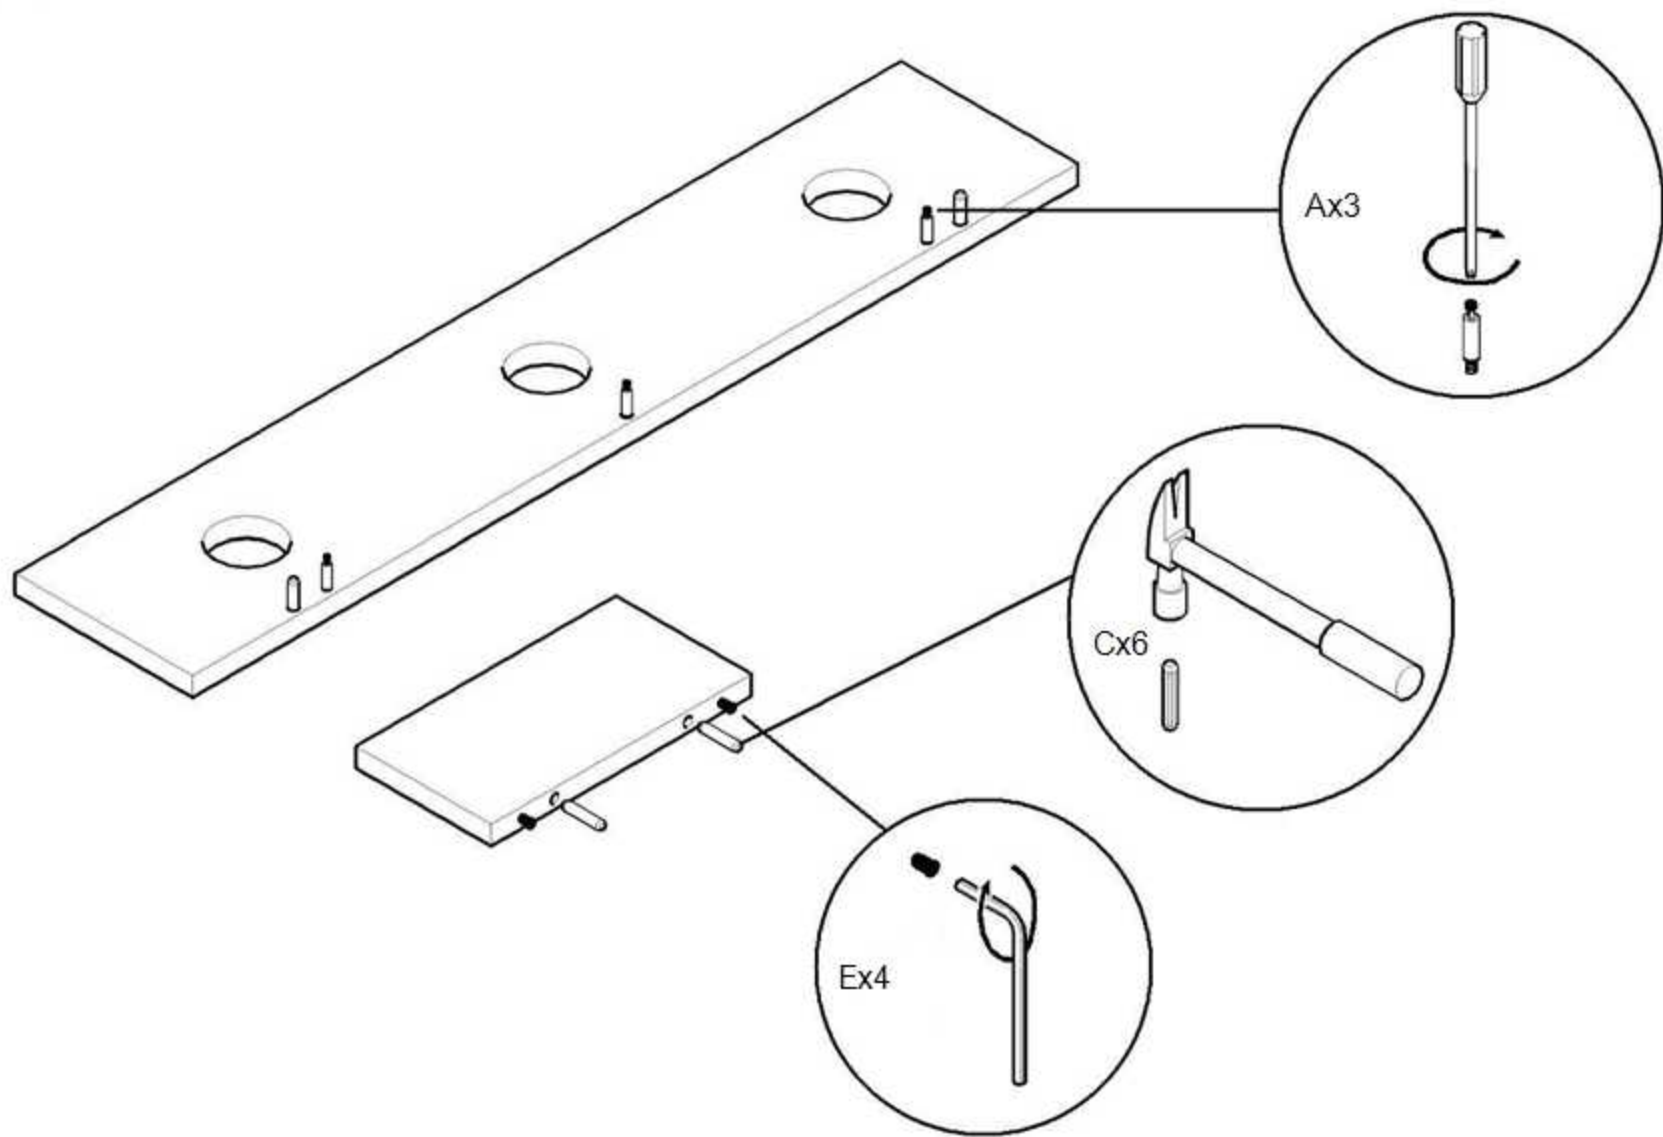


HB61085 MIRROR ASSEMBLY INSTRUCTION




												
X3	X3	Ø 8x40 X6	M3.5x15 X8	M3.5x30 X4	X2	X2						


1



2

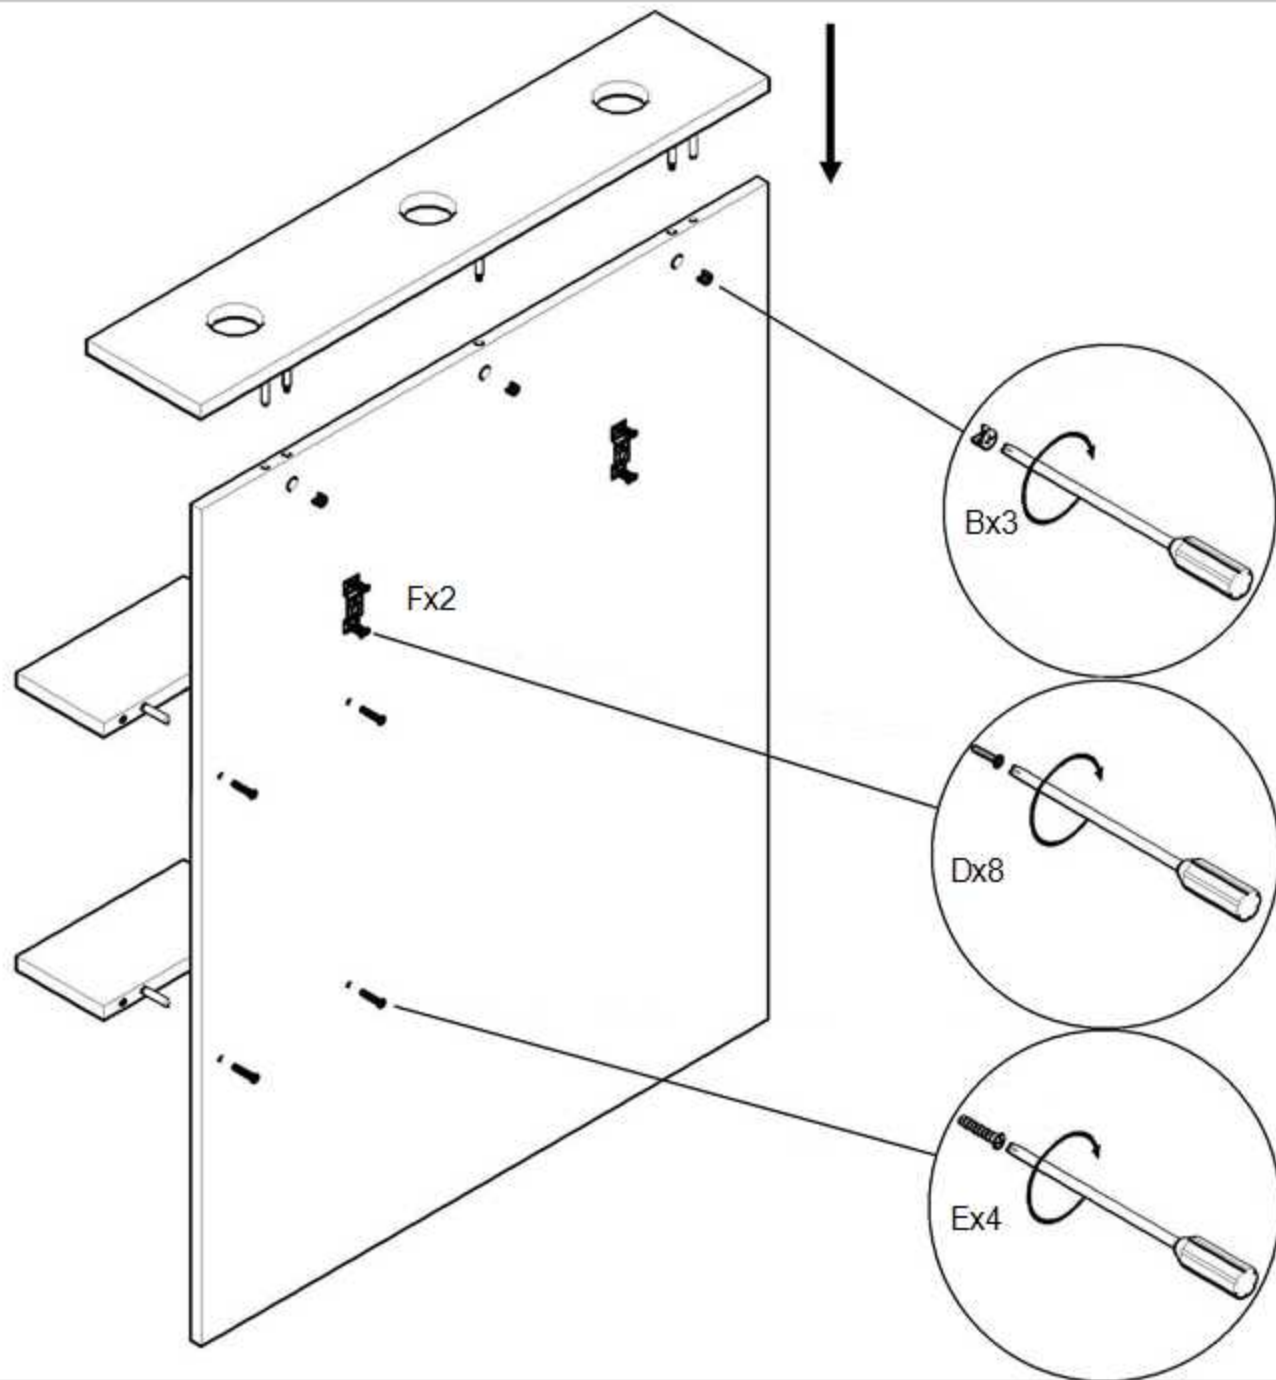




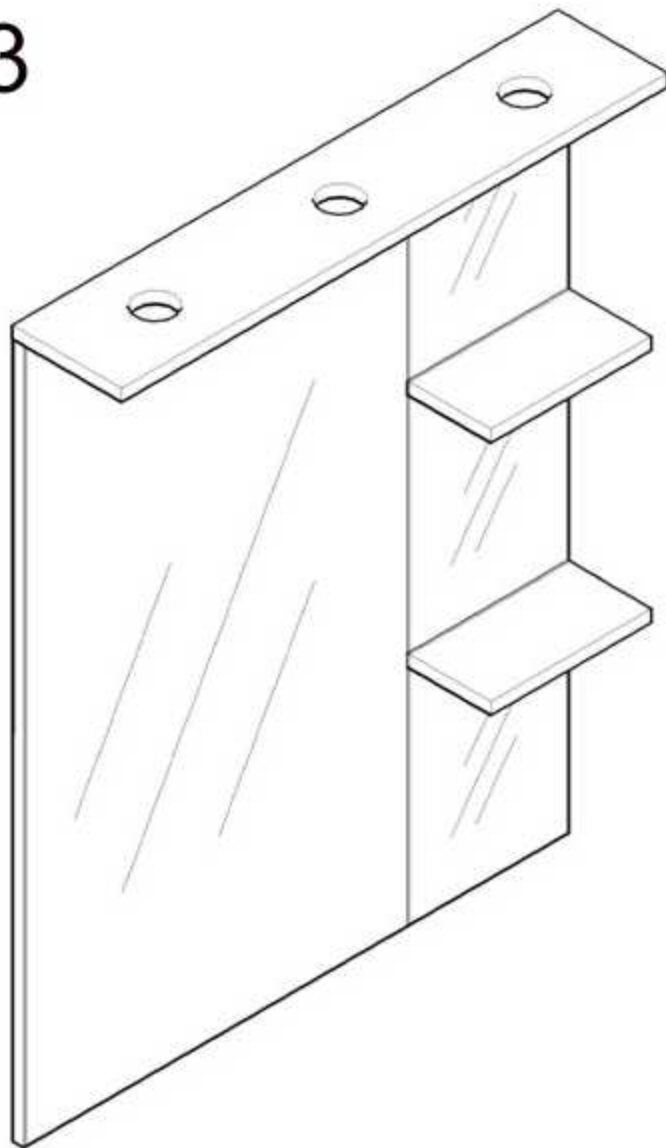





3

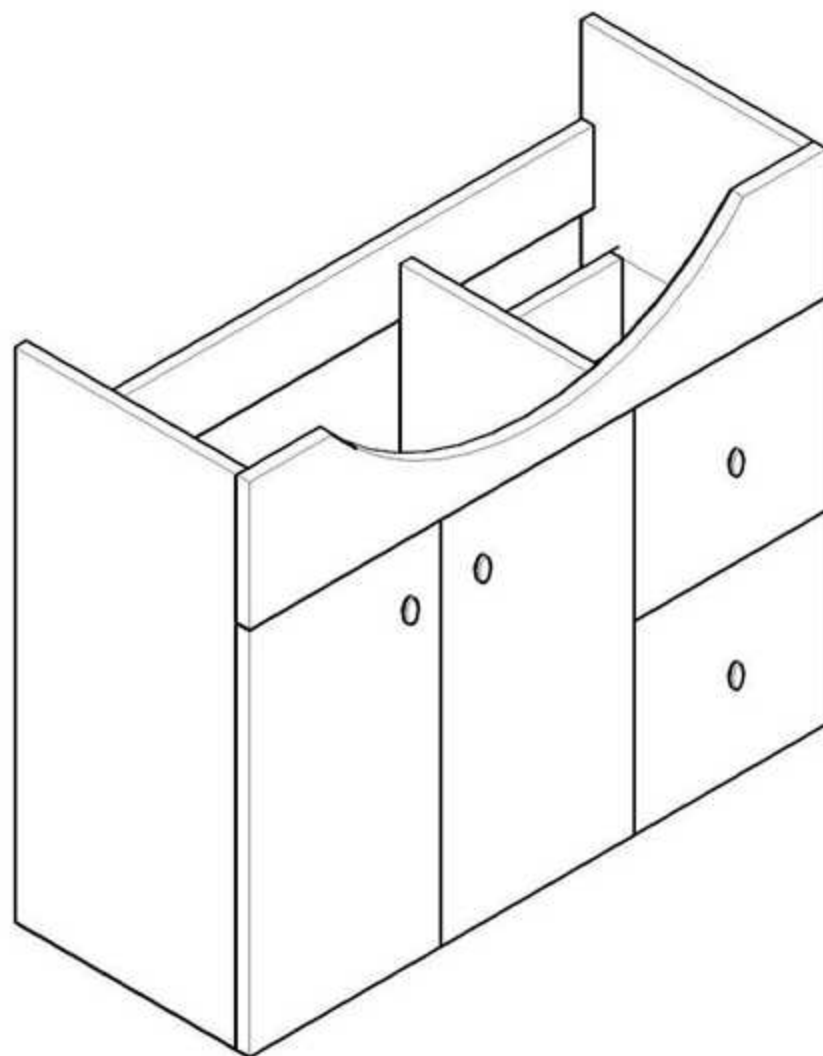


Husk at tørre spejlet af efter brug (bad/damp).

HB61085 CABINET ASSEMBLY INSTRUCTION




 X22	 X22	 X28	 X56	 X8	 X4	 X4	 X4			
	Ø 8x40	M3.5x15	M3.5x30							


1

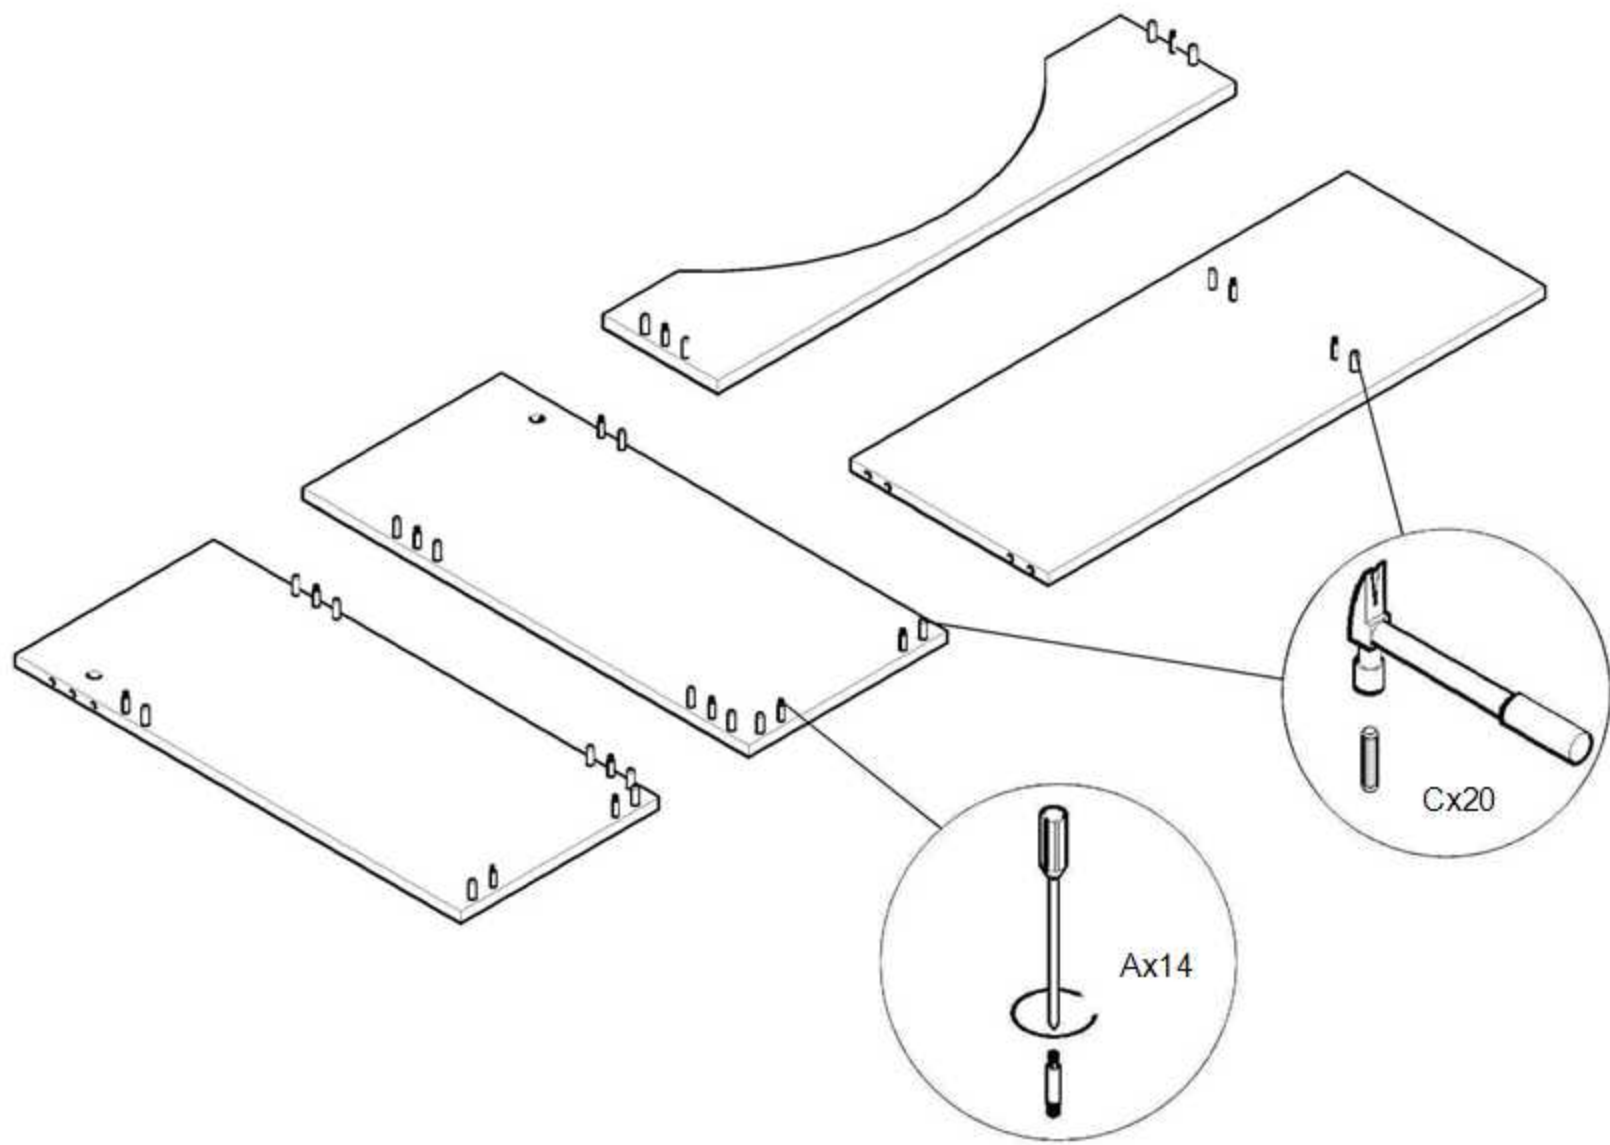


2

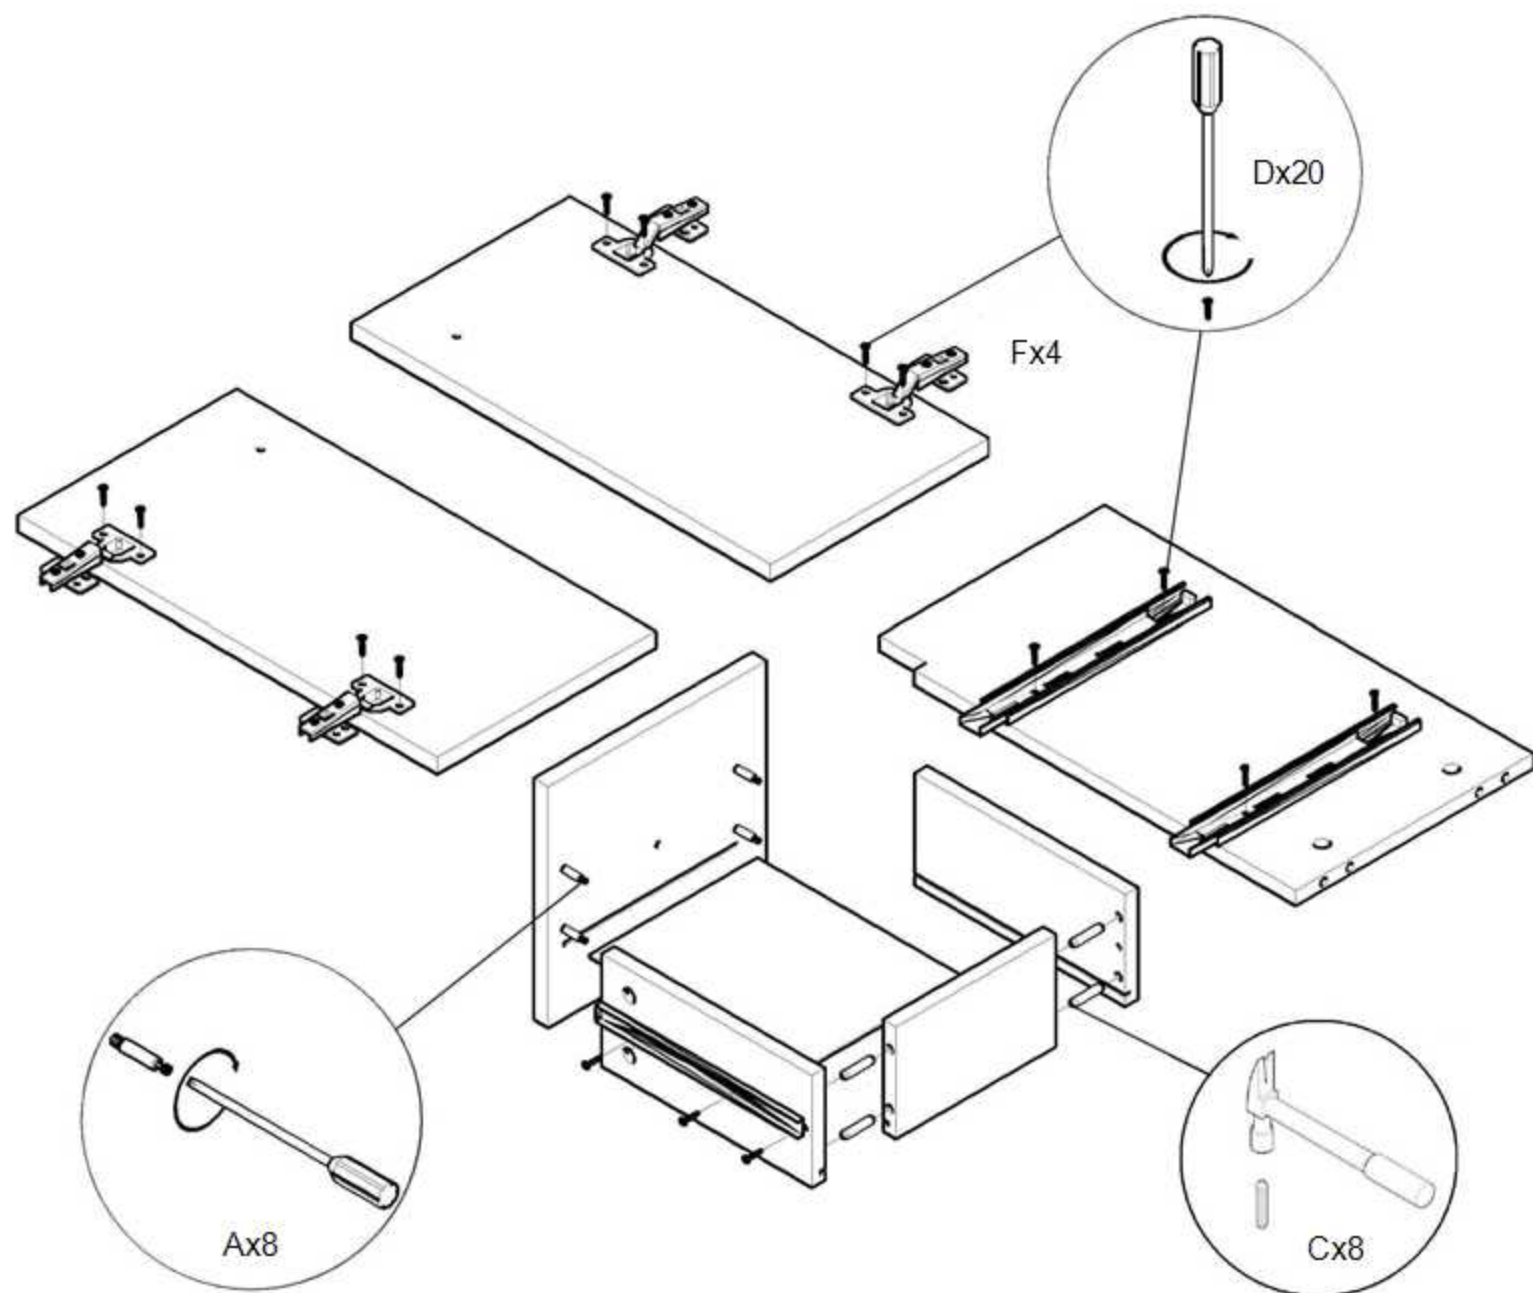


3

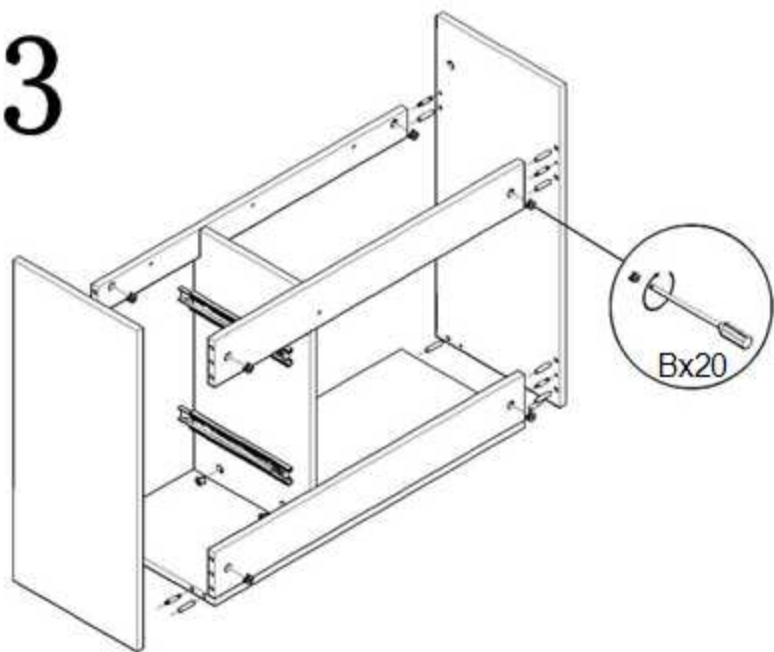


4

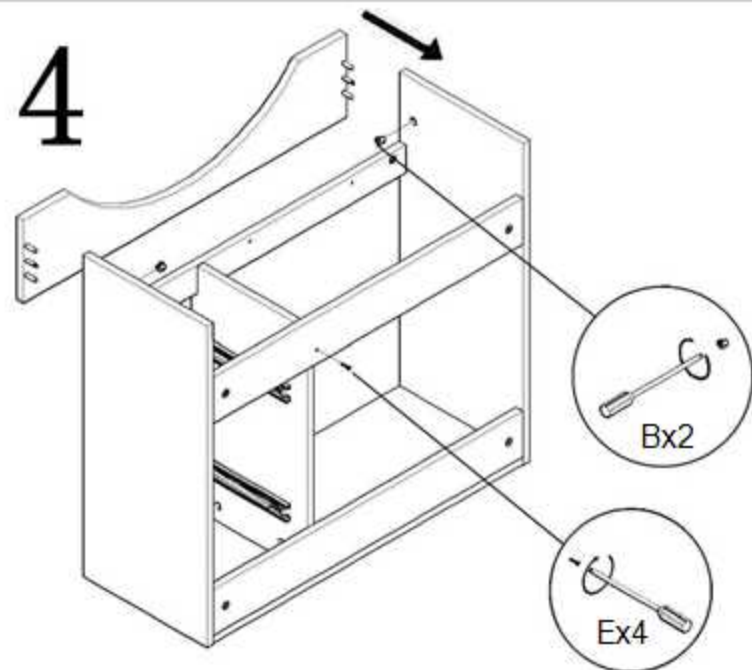


5

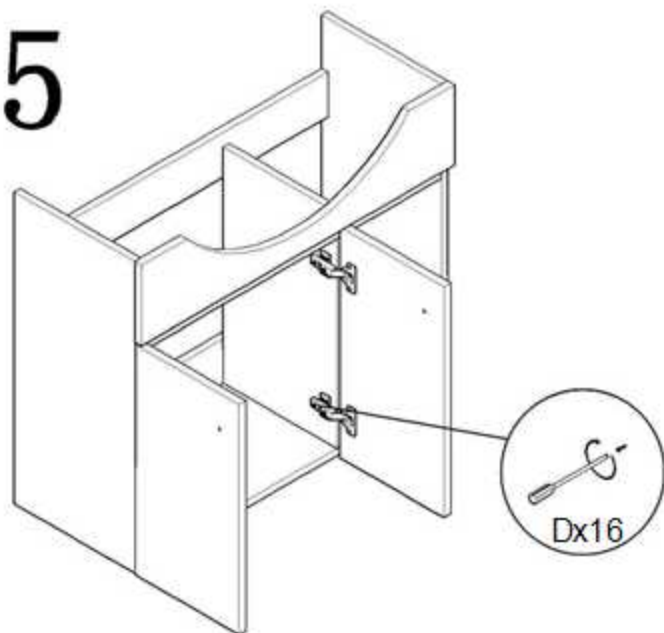

6

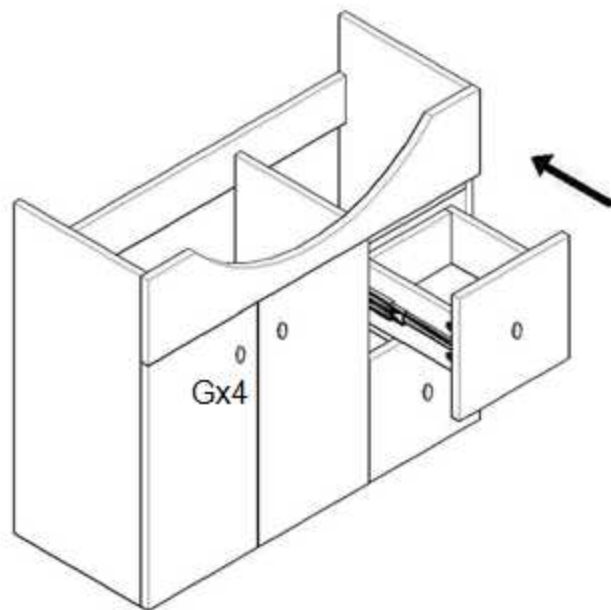

7

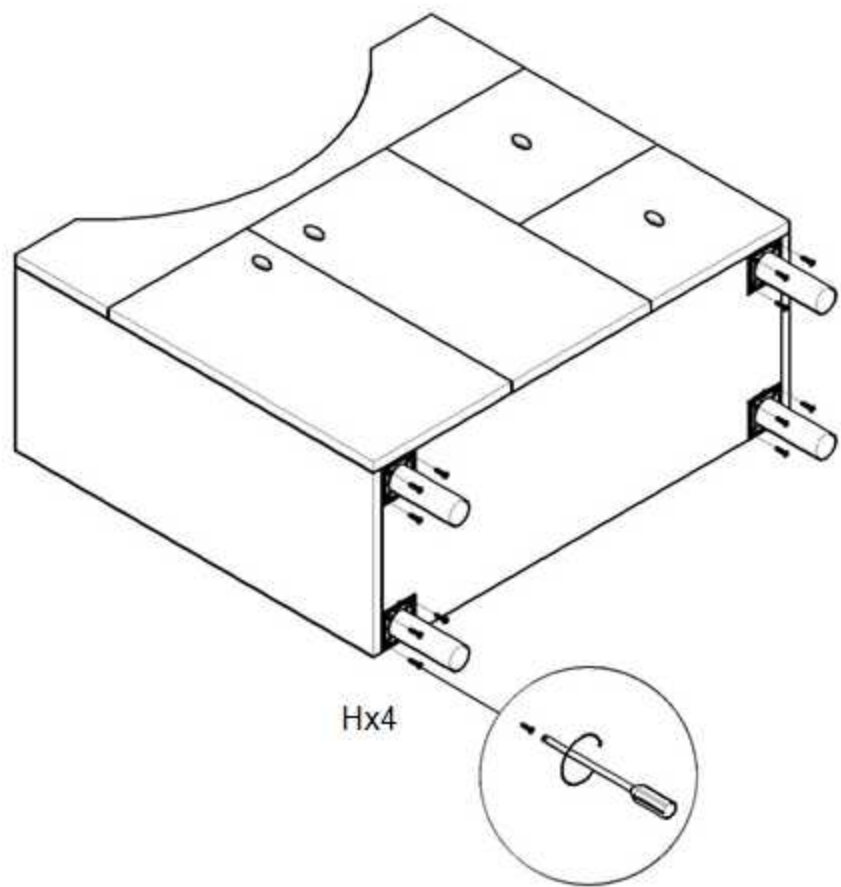

8

